


WILLOW | ECO
SERIES

2 SLICE TOASTER USER'S MANUAL

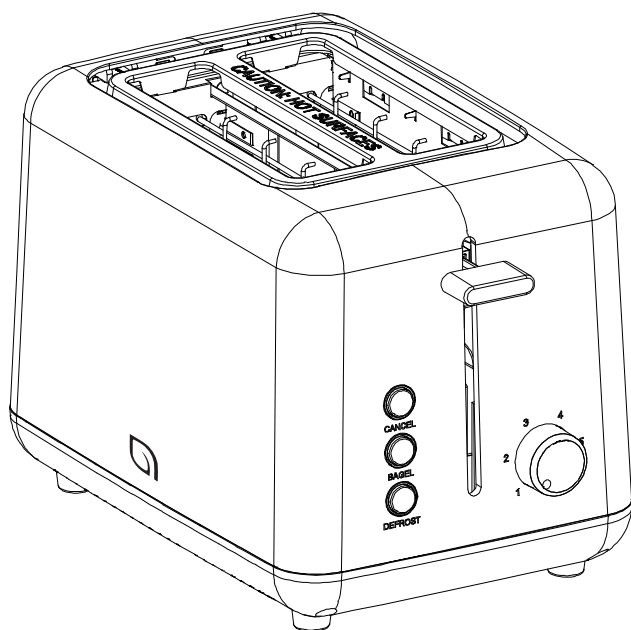

Before first use, always double-check to ensure that all packaging materials have been removed from your appliance.



DON'T BE ALARMED. New parts might have a smell when first heated, but it will fade after a few uses. This is completely normal.



Read the instruction manual before using the machine.
Save these instructions.

CONTENT

IMPORTANT SAFEGUARDS	1
POWER SUPPLY	2
HOW TO USE	3
DESCRIPTION OF PARTS	3
BEFORE FIRST USE	3
OPERATING INSTRUCTIONS	4
HINTS AND TIPS	4
CARE AND MAINTENANCE	5
CRUMBS	5
DISPOSAL	5
QUICK START	5
INFORMATION AND SERVICE	6

IMPORTANT SAFEGUARDS

Read all instructions carefully before use. When using electrical appliances, basic safety precautions should always be followed including the following:

1. Do not touch hot surfaces. Use handles or knobs.
2. Do not immerse cord or plug in water or other liquid to avoid electrical shock.
3. The toaster should only be used by or under the supervision of a responsible adult.
4. Suitable for use for children 8 years and above. Cleaning and user maintenance tasks should only be undertaken by adults.
5. Keep appliance and cord out of reach of children.
6. Unplug before cleaning and let it cool down before handling parts.
7. Replace this unit immediately if malfunctioning or damaged. Do not operate any appliance with a damaged cord or plug.
8. Use only manufacturer-recommended attachments to prevent injuries.
9. Use indoors only; do not use outdoors.
10. Prevent cord from hanging over table/counter edges or near hot surfaces.
11. Keep away from hot burners, ovens, or electric sources.
12. Ensure all controls are turned off before unplugging from the wall outlet.
13. Do not use this appliance for purposes other than its intended use.
14. Avoid oversized items, foil packages, or utensils in the toaster to prevent fire or electric shock.
15. During use, keep away from curtains, draperies, walls, and any combustible materials.
16. Do not attempt to dislodge food when the toaster is plugged in.
17. Avoid water exposure; do not use in a bathroom.
18. Position upright on a firm, level, heat-resistant surface, and out of children's reach.
19. Caution: Hot area around toasting slot during use — avoid touching.
20. Do not cover toasting slots when hot or in use.
21. If bread jams, unplug, let it cool, and gently remove without using sharp objects to avoid damage to the appliance.
22. Do not toast buttered items or sandwiches in the toaster.
23. Do not use torn, curled, or misshapen slices, you may jam the toaster.
24. Unplug and let the unit cool down
25. Clean out crumbs frequently to avoid build-up.
26. Use only with closed crumb tray; do not operate if open.
27. Keep the toaster and cord away from hot surface areas.
28. Use only for toasting bread products.
29. Avoid Hazard. Do not use if damaged or malfunctioning; replace a damaged cord promptly.
30. Do not operate with external timers or remote-control systems.
31. Use only as described in the user manual; avoid any unintended use.
32. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, It is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
33. For Household Use Only.


POWER SUPPLY

- 34. Before first use, make sure the power voltage matches the information on the appliance rating label.
- 35. For safety, only connect the appliance to an outlet with a grounding feature.
- 36. To avoid overheating, fully unwind the power cord.
- 37. Do not let the power cord hang over the edge of tables or countertops.
- 38. Use a short power cord and organize it to minimize the risk of entanglement or tripping. Avoid replacing it with a longer cord or using an extension cord. If needed, consult a qualified electrician to install a grounded wall socket near the appliance. Additionally, arrange the power cord to prevent accidental catching, tripping, or stepping on it.
- 39. Do not cover the power cord or place it under a heavy object.
- 40. Make sure the power cord is not crushed or bent especially where the power cord attaches to the appliance and the plug.
- 41. Always unplug the power cord when the appliance is not being used, when it's malfunctioning, before attaching accessories, and before cleaning or storing it.
- 42. Always disconnect by grasping the plug, not the wire.
- 43. Avoid plugging in the power cord or using the appliance with wet hands or while standing in water.
- 44. Keep the appliance and power cord away from open flames and hot surfaces
- 45. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of an electric shock, this plug is intended to fit into a polarized outlet in one orientation only. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE HOUSEHOLD USE ONLY

HOW TO USE

DESCRIPTION OF PARTS

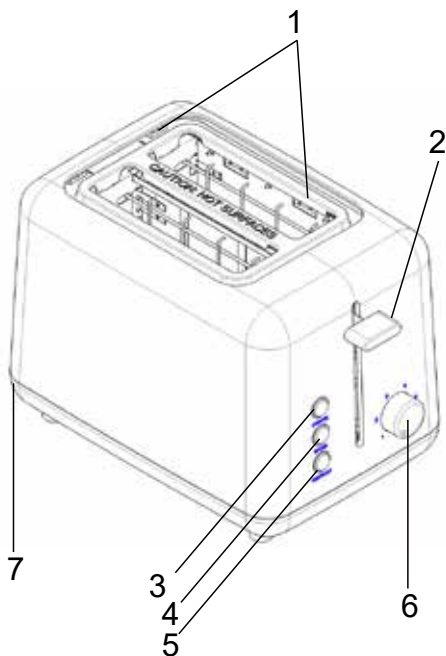

- 1.Toasting slots
- 2.Loading handle
- 3.CANCEL button
- 4. BAGEL button
- 5. DEFROST button
- 6. Browning control knob
- 7.Crumb tray

BEFORE FIRST USE

Adjust the browning level to the maximum position (turn the knob to the max level), and run the toaster without bread to condition the new elements. You may notice a slight odor, which is normal and not a cause for concern. Please ensure proper room ventilation during this process.

OPERATING INSTRUCTIONS

Making Toast:

1. Position the toaster upright on a stable, level, heat-resistant surface. Avoid placing it near anything sensitive to moderate heat.
2. Plug it into a power socket, and if needed, switch the socket on. The middle light around the button will illuminate.
3. Use the knob to adjust the browning level for your toast; a higher number results in a darker toast.
4. Center the bread in the toasting slot, ensuring it does not exceed a maximum thickness of 20mm.
5. Press the bread carriage handle down fully; it will not lock unless the toaster is connected to the power supply.
6. The light around the button will activate, and the elements will heat up.
7. Once complete, the toast will pop up, and the elements will turn off.

Defrost Button:

Eliminate the uncertainty in toasting frozen bread with this feature. Select your preferred browning level, place the frozen bread in the toasting slot, lower the bread carriage handle, and press the button. The light around the button will illuminate, and the toasting time will be automatically adjusted to achieve the same browning level as with unfrozen bread.

Cancellation Function:

If you wish to halt the toasting cycle before completion, simply press the cancel button. This action will cause the toast to pop up, turn off the elements, and extinguish the indicator light.

Top of Form

Bagel button

Utilize this option to toast bread on just one side.

HINTS AND TIPS

If toasting two slices, they should be of similar size, thickness and freshness

Old (yesterday's) bread contains less moisture, so makes crisper toast

Old or thin bread cooks faster than fresh or thick bread, so use a lower setting.

Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

CARE AND MAINTENANCE

1. Disconnect the toaster by unplugging it and allow it to cool down completely.
2. Gently wipe the exterior with a soft, damp cloth.
3. Avoid introducing any foreign objects into the slot, as this may damage the heating element.
4. Refrain from using harsh or abrasive cleaning agents or solvents.
5. Do not immerse the toaster in water or any other liquid.

CRUMBS

Frequently remove crumbs to ensure hygiene and prevent fire hazards. After unplugging and allowing the toaster to cool, take out and empty the crumb tray. Wipe it with a damp cloth, dry it, and then carefully slide it back into the toaster. Do not operate the toaster unless the crumb tray is securely in place and closed.

QUICK START

- Plug the toaster into an electrical outlet.
- Insert your toast or bagel into the slots.
- Adjust the browning level using the 1-5 shade knob.
- Press down the toast lever to begin toasting.
- To stop toasting at any time, press the cancel button.
- For bagels, press the bagel button.
- To defrost frozen bread, press the defrost button.

DISPOSAL

Correct Disposal of this product	
	This symbol indicates that this appliance may not be treated as household waste. Instead, it should be taken to the appropriate collection point for recycling electrical and electronic equipment. Please use the return or collections services available in your community or contact the retailer where you purchased this product.

PRODUCT SPECIFICATIONS

Name	2 Slice Toaster
Model No.	7720MY, 7721MY, 7722MY
Rated Voltage	120 VAC, 60 Hz
Rated power	900W

For customer service contact us here:

-  <https://www.cookwithwillow.com>
-  40 Wall St, Suite 1605, 16th Floor,
New York, NY 10005
-  support@cookwithwillow.com
-  1 (888) 992-5943

