


WARRIOR BLENDER USER'S MANUAL

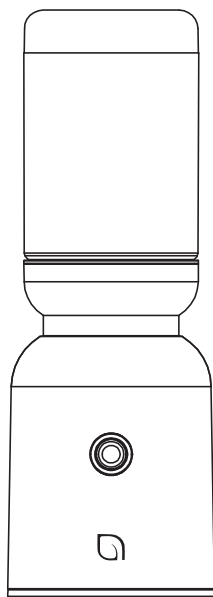

Before first use, always double-check to ensure that all packaging materials have been removed from your appliance.



DON'T BE ALARMED. New parts might have a smell when first heated, but it will fade after a few uses. This is completely normal.



Read the instruction manual before using the machine.
Save these instructions.

CONTENT

IMPORTANT SAFEGUARDS	1
POWER SUPPLY	3
HOW TO USE	4
BEFORE FIRST USE	4
OPERATING INSTRUCTIONS	5
CLEANING AND MAINTENANCE	6
QUICK START	6
DISPOSAL	7
INFORMATION AND SERVICE	7

IMPORTANT SAFEGUARDS

Read all instructions carefully before use. When using electrical appliances, basic safety precautions should always be followed, including the following:

WARNING

- Before plugging the appliance into the wall socket, check that the voltage indicated on the rating label of the appliance matches your local voltage. If this is not the case, do not use the appliance and return it to the retailer immediately.
- Use the blender only for its intended purpose. Improper use or failure to follow the instructions may result in fire, electric shock or serious injury
- This blender has been designed exclusively for household or indoor use. Only use the blender to blend food as described in this manual. It is not intended for commercial, industrial or outdoor use.
- **DO NOT** use the appliance for any purpose other than its intended use.
- **THIS IS NOT A TOY. Suitable for use for children 8 years and above. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.** This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they have received supervision or instruction on the appliance's usage from a person responsible for their safety.
- Cleaning and user maintenance tasks should only be undertaken by adults.
- Never leave the blender unattended while it is switched on
- The blades are extremely sharp. Never insert your hands or any objects in the jar while the blender is in operation, may result in serious injury.
- **DO NOT** touch the blades when cleaning. The blades are extremely sharp. Use caution when emptying the jar and during cleaning. Use a long-handled spatula or brush for these purposes.
- **DO NOT** move the blender while it is switched on, may result in serious injury.
- If you need to open the lid, always stop the blender and remove the jar from the power base.
- Ensure that the food and liquid content is not filled above the "MAX" marking on the jar, or is enough to cover the blades for proper blending.
- Food ingredients must be cut into 1/2 inch pieces or smaller.
- Never use the appliance without the lid.
- Unplug the appliance immediately after use, before cleaning and storing.
- To protect against fire or electrical hazards, do not immerse the power base, power cord or plug in water or any other liquid. Never rinse them under the tap.
- To prevent scalding or damage to the appliance, do not blend hot liquids or food. Let the food cool down to room temperature before blending.
- To unplug from the mains power outlet, hold and pull the plug. Do not pull on the cord.

WARNING (continued)

- Removing the power plug is the only way to completely separate the appliance from the electric supply. Ensure that the power plug is in an operable condition and easily accessible.
- **DO NOT** touch or operate the appliance with wet hands or while standing on a wet floor.
- **DO NOT** connect this appliance to an external timer or remote control system.
- Only use the appliance with the original accessories supplied.
- The use of accessory attachments not recommended or sold by the manufacturer may result in fire, electric shock or injury.

POWER SUPPLY GUIDELINES

- Before using the appliance, ensure the power voltage matches the information on the appliance rating label.
- Only connect the appliance to a grounded outlet for safety.
- Fully unwind the power cord to avoid overheating.
- Do not let the power cord hang over the edge or touch hot surfaces of tables or countertops.

IMPORTANT POWER SUPPLY SAFEGUARDS


- Use a short power cord to reduce entanglement risk. Consult a qualified electrician for a grounded wall socket if needed
- Avoid covering or placing heavy objects on the power cord.
- Ensure the power cord is not crushed or bent, especially at the appliance and plug connections.
- Always unplug the power cord when not in use, when it's malfunctioning, before attaching accessories, and before cleaning or storing it.
- When disconnecting, grasp the plug, not the wire.
- Avoid plugging in the power cord with wet hands or while standing in water.
- Keep the appliance and power cord away from open flames and hot surfaces.
- **NOTE:** This appliance has a polarized plug (one blade is wider than the other). Ensure it fits into the outlet correctly. To reduce the risk of electric shock, it is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not modify the plug in any way.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

FOR HOUSEHOLD USE ONLY

HOW TO USE

DESCRIPTION OF PARTS

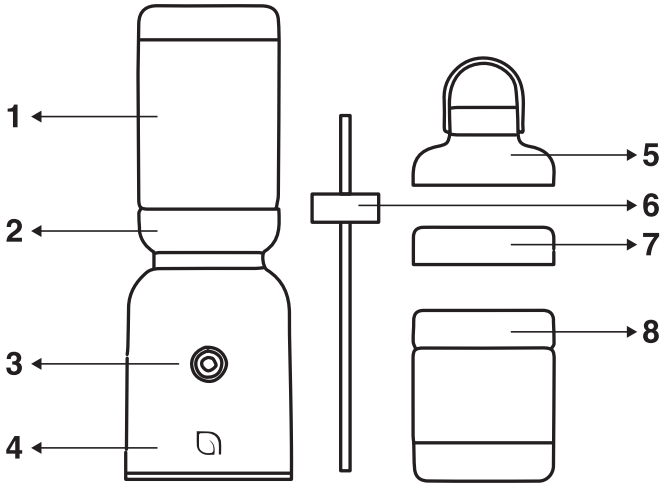

- 1. 1L Plastic Jar
- 2. Blade Assembly
- 3. On/Off switch with indicator light
- 4. Blender Base
- 5. Carrying Cap
- 6. Straw with Cap
- 7. Storage Lid
- 8. ½L Plastic Jar

BEFORE FIRST USE

Check that all accessories are complete, and the unit is not damaged. We recommend cleaning the unit before your first use (see Cleaning and Care). Thoroughly clean and dry all removable parts as instructed in the **CARE AND MAINTENANCE** section.

OPERATIONS

- Use the blender for milkshakes, fruit/vegetable juices, drinks, etc.
- Remove the Blade Assembly from the jar.
- Add diced ingredients and liquid, not exceeding the "MAX" level.
- Secure the Blade Assembly to the jar by turning clockwise.
- Attach the jar with Blade Assembly to the base, twisting clockwise until it clicks.
- Plug in the blender.
- Press the Power Switch 2 times to begin 1-minute timed blend cycle.
- Hold the Power Switch to pulse the blades. Repeat until desired consistency is achieved.

Tips for Using Your Blender:

- Cut ingredients into 1/2 inch pieces. Remove hard peels, stones, seeds.
- Not suitable for beating egg whites, whipping cream, mashing potatoes, grinding meat, or mixing dough.
- Do not blend hard foods, bones, shelled seafood, or nuts.
- Blend ice cubes not exceed 1/2 inch and total weight of ice cube around 0.3 lb will have the best performance.
- Do not blend hot liquids. Let food cool to room temperature.
- Do not run the blender on an empty jar.


CLEANING AND MAINTENANCE

- **CAUTION:** Always unplug the appliance and remove the jar from the base before cleaning.
- To prevent electrical shock, avoid immersing the cord, plug, or base in water or any other liquid. Keep electrical parts dry.
- Wipe the external surfaces of the product with a soft, damp cloth to remove stains.
- Handle blades with care.
- Avoid solvents, chemicals, abrasives, wire brushes, sharp objects, or scouring pads.
- For quick cleaning, fill the jar half-full with warm water and dish detergent. Blend, then rinse.
- For thorough cleaning, wash the jar, cap, and blades with warm water and detergent. Use a long-handled brush. Wipe the base with a damp cloth.
- Dry all parts completely before reassembling.
- Finally, reassemble all parts and store the appliance for future use.

QUICK START

- Plug the blender into an electrical outlet.
- Ensure the plastic jar is securely locked in place.
- Ensure that the suction cups at the bottom of the blender are correctly secured to your countertop to ensure no spillage.
- Hold down the power button to use the pulse function.
- Press the power switch twice to start a 1-minute timed blending cycle.

DISPOSAL

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return our used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

PRODUCT SPECIFICATIONS

Name	Warrior Blender
Model No.	7726MY, 7727MY, 7728MY
Rated Voltage	120 VAC, 60 Hz
Rated power	600W

For customer service contact us here:



<https://www.cookwithwillow.com>



40 Wall St, Suite 1605, 16th Floor,
New York, NY 10005



support@cookwithwillow.com



1 (888) 992-5943

