
WILLOW™ | ECO SERIES

PIZZA OVEN
USER'S MANUAL

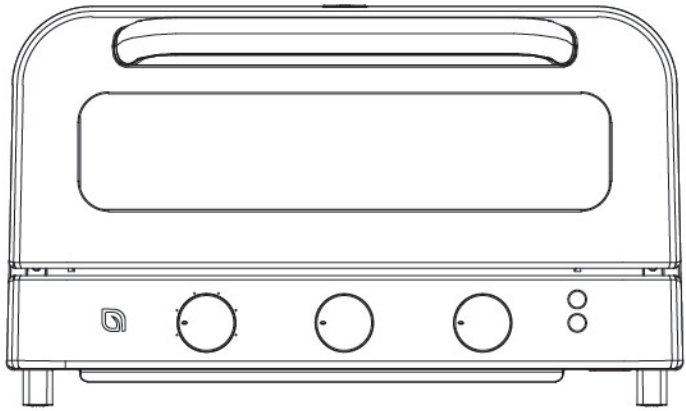

Before first use, always double-check to ensure that all packaging materials have been removed from your appliance.

DON'T BE ALARMED. New parts might have a smell when first heated, but it will fade after a few uses. This is completely normal.

Read the instruction manual before using the machine.
Save these instructions.

CONTENT

IMPORTANT SAFEGUARDS	2
POWER SUPPLY SAFETY	3
HOW TO USE	4
DESCRIPTION OF PARTS	4
BEFORE FIRST USE	4
OPERATING INSTRUCTIONS	4
CARE AND MAINTENANCE	6
CRUMB REMOVAL	6
QUICK START	7
DISPOSAL	7
PRODUCT SPECIFICATIONS	7

IMPORTANT SAFEGUARDS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS APPLIANCE. WHEN USING ELECTRICAL APPLIANCES, ALWAYS FOLLOW BASIC SAFETY PRECAUTIONS, INCLUDING THE FOLLOWING:

- Do not touch hot surfaces. Always use handles or knobs.
- To protect against fire, electric shock or injury, do not immerse the cord, plug or appliance in water or other liquids.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug the appliance from the outlet when not in use and before cleaning. Let it cool down before putting on or taking off parts, and before cleaning.
- Keep the appliance and cord out of reach of children.
- Always unplug the toaster and allow it to cool before cleaning or handling any parts.
- If the appliance is damaged or malfunctioning, stop using it immediately and replace it. Do not use it with a damaged cord or plug.
- Use only accessories recommended by the manufacturer to avoid injury.
- For indoor use only. Do not use outdoors.
- Do not allow the power cord to hang over the edge of tables or countertops or come into contact with hot surfaces.
- Keep the appliance away from heat sources such as burners, ovens, and hotplates.
- **USE CAUTION:** When removing heatproof dishes containing hot liquids from the appliance.
- Ensure all controls are in the "off" position before remove plug from outlet.
- Do not use the appliance for other than intended purposes.
- Do not put oversized foods or metal utensils in the appliance. Doing so may cause fire or electric shock.
- Keep the toaster away from curtains, drapes, walls, and any flammable materials during use.
- Do not store any item on top of the appliance when in operation.
- Do not use metal scouring pads to clean. Small pieces can break off and come into contact with electrical parts, which could cause an electric shock.
- Always place the oven on a flat, stable, heat-resistant surface and keep it out of children's reach.
- **USE CAUTION:** when using containers made of materials other than heatproof metal or glass.

- Do not place any of the following materials in the appliance: flammable items (paper, cardboard, plastic, wood, etc.)
- Do not cover the crumb catcher or any part of the appliance with metal foil. Doing so may cause overheating.
- Avoid using torn, curled, or misshapen slices as they may jam the toaster.
- Always unplug and let the oven cool after use.
- Clean out crumbs regularly to prevent buildup and fire hazards.
- Only use the oven with the crumb tray closed and properly in place.
- Do not use the oven with external timers or remote controls.
- Only use the appliance as described in this manual.
- This appliance has a polarized plug (one prong is wider than the other) to reduce the risk of electric shock. The plug will fit only one way into a polarized outlet. If it doesn't fit, reverse it. If it still doesn't fit, consult a qualified electrician. Do not modify the plug.

NOTE: THIS IS FOR HOUSEHOLD USE ONLY


POWER SUPPLY SAFETY


- Before first use, confirm that your outlet's voltage matches the rating label on the toaster.
- Only connect the oven to an outlet with a proper grounding feature.
- Fully unwind the power cord to avoid overheating.
- Do not let the power cord hang over edges of tables or counters.
- Use a short power cord and arrange it to prevent entanglement or tripping. Avoid using extension cords. If necessary, have a grounded outlet installed by a qualified electrician.
- Do not place the cord under heavy objects or cover it.
- Ensure the cord is not bent or crushed, particularly at connection points.
- Always unplug the oven when not in use, or before cleaning or storing.
- Always unplug by pulling the plug, not the cord.
- Do not plug in or operate the toaster with wet hands or while standing in water.
- Keep the power cord and appliance away from open flames and hot surfaces.
- This oven features a polarized plug for safety. Follow the same user guidelines as in **IMPORTANT SAFEGUARDS** above.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

HOW TO USE

DESCRIPTION OF PARTS

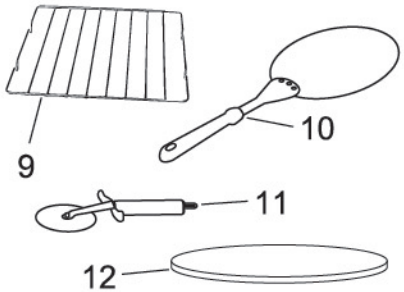

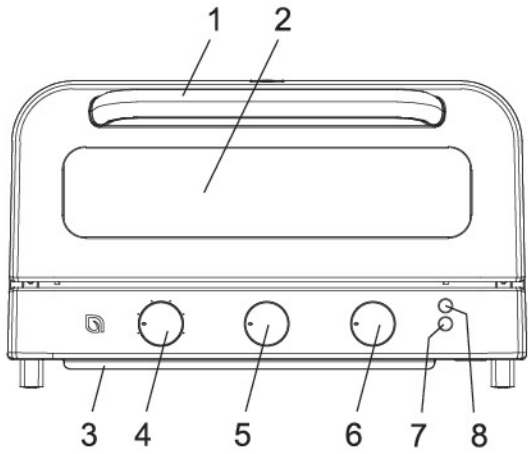

1. Handle
2. Glass Window
3. Crumb Tray
4. TEMP/ °F Knob
5. Pizza Cooking Timer Knob
6. Menu Timer Knob
7. Heat Light
8. Power Light
9. Oven Rack
10. Pizza Peel
11. Pizza Cutter
12. Pizza Stone

BEFORE FIRST USE


- Read all of the instructions contained in this manual.
- Please remove all bags, paper, labels, and packing tape from the oven before use.
- Inspect the oven to ensure all parts are intact and undamaged.
- Wash all the accessories in hot, soapy water or in the dishwasher.
- Thoroughly dry all accessories, and make sure to place all oven parts back inside the oven before using it.

PLEASE NOTE: Initial start-up operation may result in minimal smell and smoke (about 15 minutes). This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.


OPERATING INSTRUCTIONS

MAKING PIZZA:

- When you're ready to use the oven, plug it in and make sure it is positioned at least 4 inches away from any objects on all sides and at least 6 inches away from anything above it..

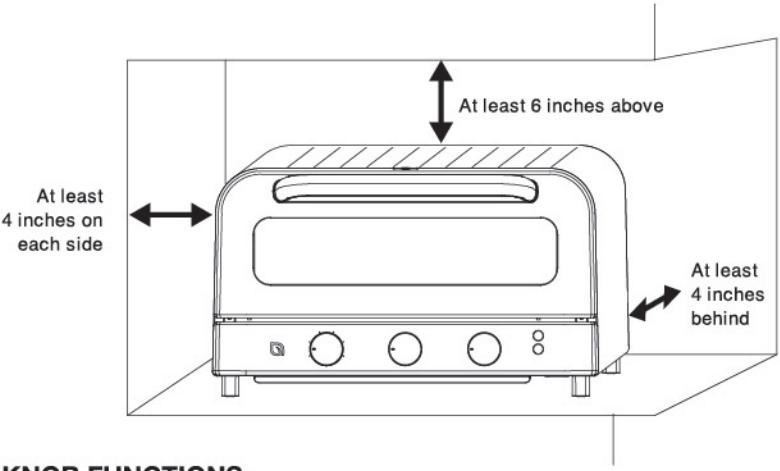

KNOB FUNCTIONS:

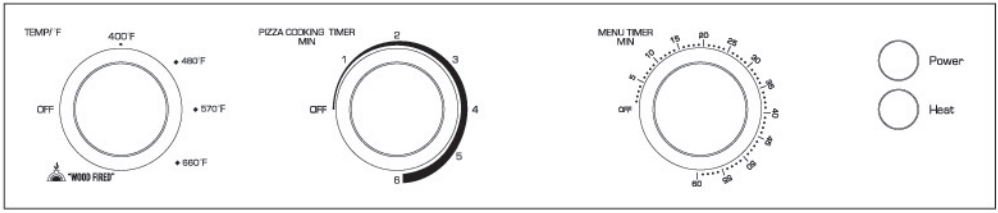

TEMP/ °F:

- Turn this knob to adjust the cooking temperature. You can choose from five preset temperature settings, ranging from 400°F to 750°F, each designed for different types of pizza.

PIZZA COOKING TIMER:

- This timer is used for pizzas that have a cooking time of less than 6 minutes.

MENU TIMER:

- This timer is used for pizzas that have a cooking time more then 6 minutes and for preheating your pizza oven.
- Plug the power cord into an outlet.
- Preheat the oven. Preheating takes about 14–17 minutes, depending on the selected pizza style.
- Open the door and place the food in the center of the pizza stone.
- Do not use glass or ceramic pans or lids.
- Close the door securely.
- Turn the TEMP/ °F knob to choose the cooking temperature, then turn the timer knob to set the cooking time.

PIZZA STYLES:

WOOD FIRED: Achieve the authentic taste of Neapolitan pizza by using this setting. The pizza is cooked at a very high temperature, producing a crisp crust with bubbles and a subtle hint of charred flavor.

THICK CRUST: In this style, the crust is thicker and doughier.

THIN & CRISPY: In this style, the dough is rolled thinly to create a crispy crust.

PAN: This pizza style is achieved by cooking the pizza in a pan, resulting in a soft and fluffy dough.

FROZEN: Heats up a precooked and frozen pizza.

PIZZA STYLES	TEMPERATURE	PREHEATING TIME	PIZZA STONE TEMP.	COOK TIME
Frozen	400 °F	15-17 mins	356-400 °F	12-16 mins
Pan	480 °F	14-16 mins	446-480 °F	10-12 mins
Thin & Crispy	570 °F	15-16 mins	536-570 °F	8-10 mins
Thick Crust	660 °F	15-16 mins	635-660 °F	3-5 mins
Wood Fire	750 °F	15-16 mins	720-750 °F	2-4 mins

PLEASE NOTE: The pizza stone is required for all the pizza styles

CARE AND MAINTENANCE

If desired, wipe the walls with a damp sponge, cloth or nylon scouring pad and mild detergent

All accessories should be washed in hot soapy water or can be cleaned in a dishwasher. The door can be wiped with a damp sponge and wiped dry with a paper or cloth towel. Clean the outside with a damp sponge. **DO NOT USE AN ABRASIVE CLEANER AS IT MAY DAMAGE THE EXTERIOR FINISH.**

LET ALL PARTS AND SURFACES DRY THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING.

Warning: Be sure to unplug the oven and allow it to cool before cleaning.

Caution: In order to avoid the risk of an electric shock, never try to repair the unit yourself. Take it to an authorized service station for examination and repair.

CRUMB REMOVAL

Frequently remove crumbs to ensure hygiene and prevent fire hazards. After unplugging and allowing the toaster to cool, take out and empty the crumb tray. Wipe it with a damp cloth, dry it, and then carefully slide it back into the oven. Do not operate the oven unless the crumb tray is securely in place and closed.

QUICK START

- Plug the pizza oven into a standard electrical outlet.
- Place the pizza stone on the oven rack to preheat.
- Set your desired temperature and preheat time. The oven will begin heating.
- The menu timer knob (used for preheat time) will ding when over.
- Using the pizza peel, slide your pizza directly onto the fully heated stone. Set cook time using the menu timer knob.
- When the timer goes off, check your pizza to see if the desired crispiness is reached. Remove carefully and enjoy.

DISPOSAL

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return our used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

PRODUCT SPECIFICATIONS

Name	Pizza Oven
Model No.	7616, 7617, 7618, 7619
Rated Voltage	120 VAC, 60 Hz
Rated power	1800W

For customer service contact us here:


www.cookwithwillow.com


40 Wall St,Suite 1605, 16th Floor,
New York, NY 10005


support@cookwithwillow.com